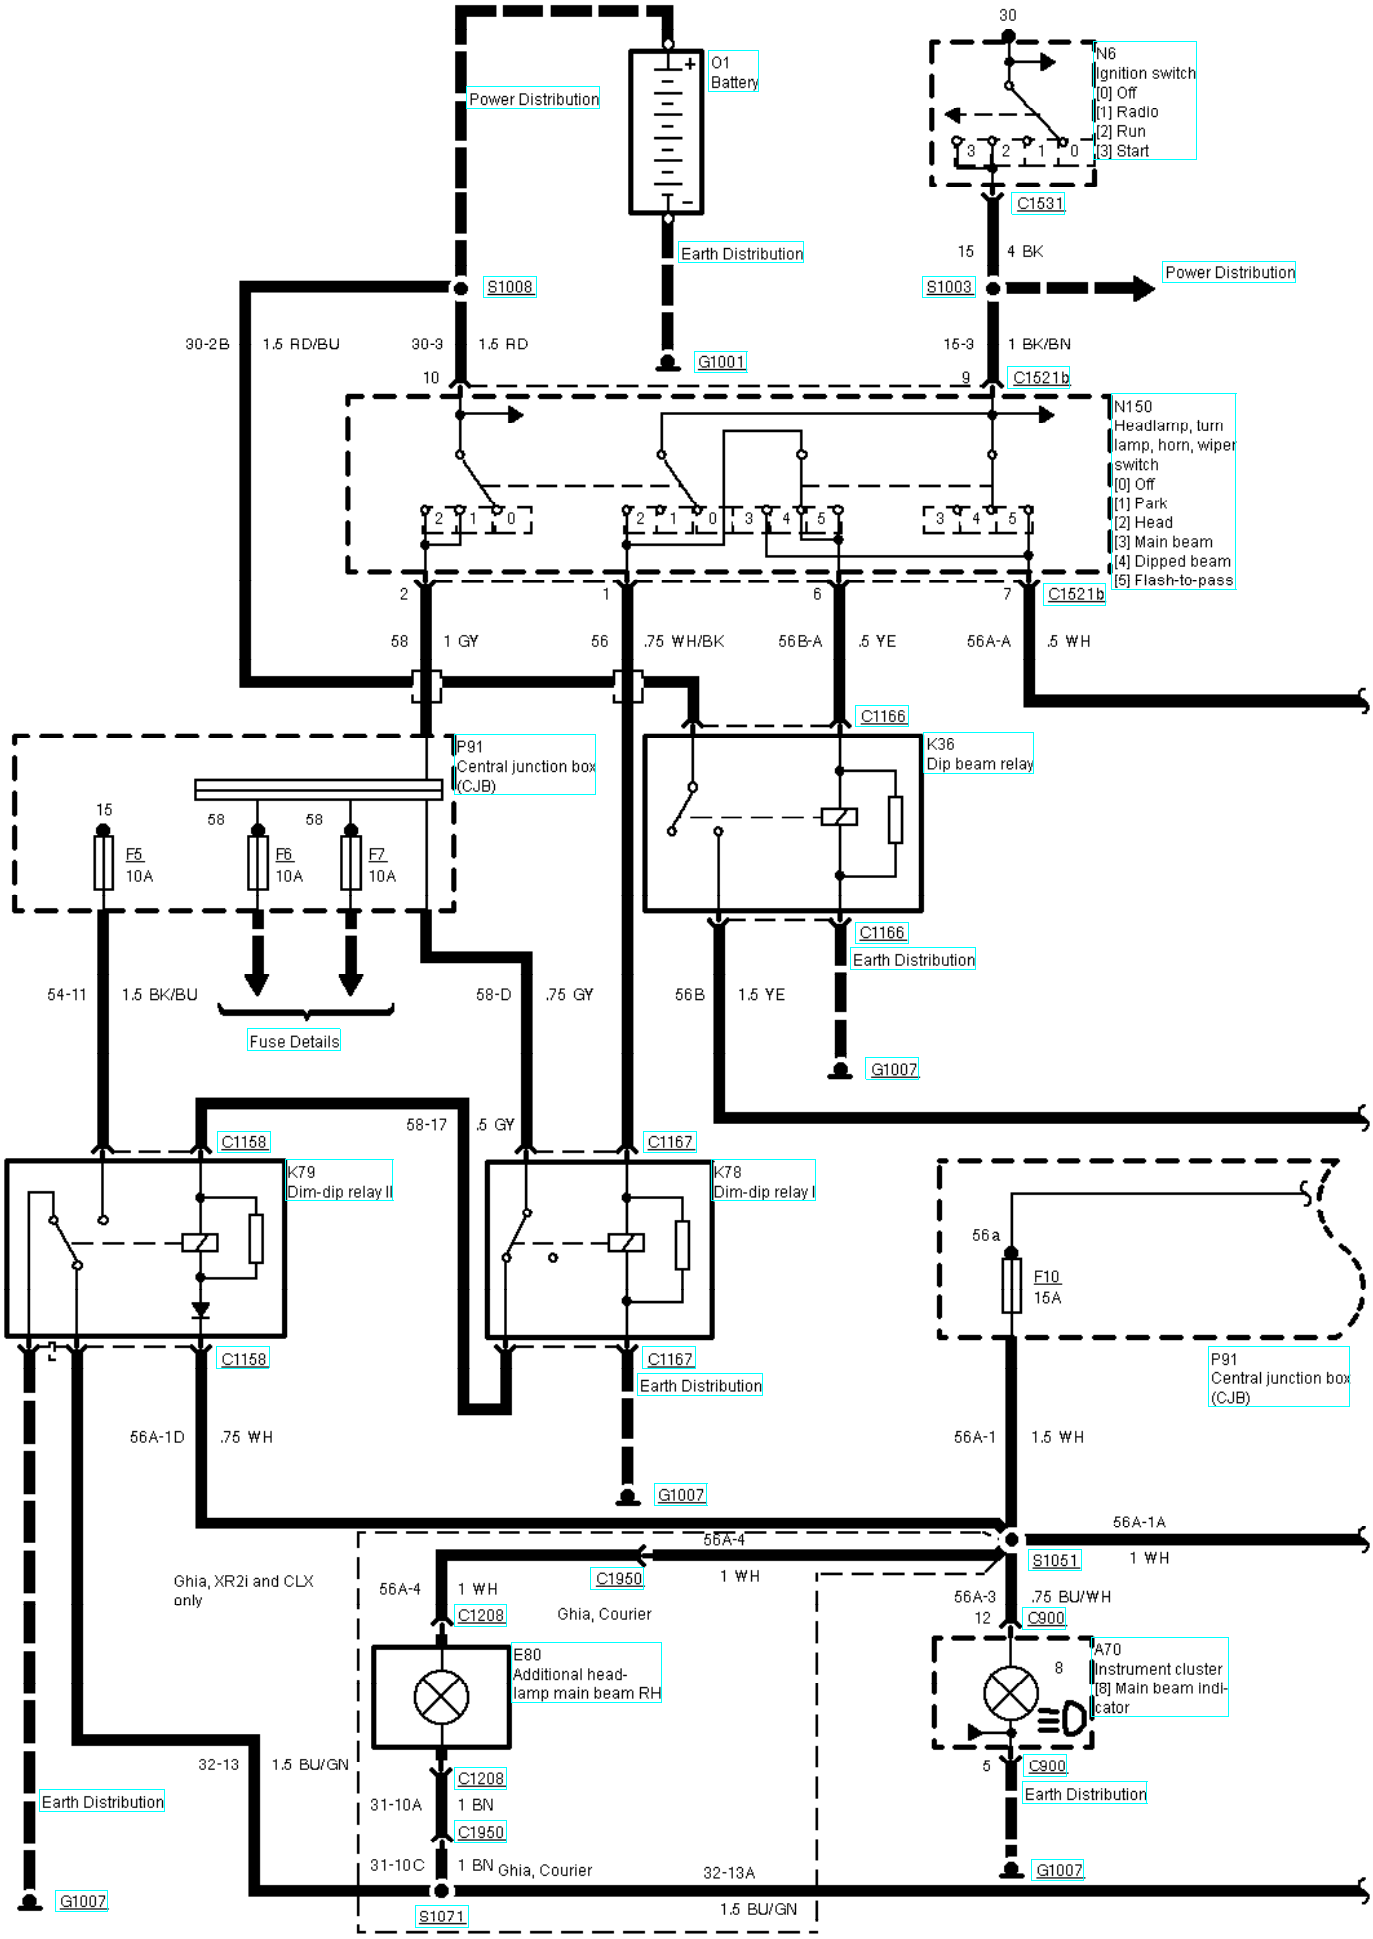
Power Distribution
O1
Battery
Earth Distribution
30
N6
Ignition switch
[0] Off
[1] Radio
[2] Run
[3] Start
C1531
15
4 BK
Power Distribution
S1008
S1003
30-2B
1.5 RD/BU
30-3
1.5 RD
G1001
15-3
1 BK/BN
10
9
C1521b
N150
Headlamp, turn lamp, horn, wiper switch
[0] Off
[1] Park
[2] Head
[3] Main beam
[4] Dipped beam
[5] Flash-to-pass
C1521b
58
1 GY
56
.75 WH/BK
56B-A
.5 YE
56A-A
.5 WH
C1166
P91
Central junction box (CJB)
K36
Dip beam relay
15
58
58
F5
10A
F6
10A
F7
10A
C1166
Earth Distribution
54-11
1.5 BK/BU
58-D
.75 GY
56B
1.5 YE
Fuse Details
G1007
58-17
.5 GY
C1158
C1167
K79
Dim-dip relay II
K78
Dim-dip relay I
56a
F10
15A
C1158
C1167
Earth Distribution
P91
Central junction box (CJB)
56A-1D
.75 WH
56A-1
1.5 WH
G1007
56A-1A
56A-4
S1051
1 WH
Ghia, XR2i and CLX only
56A-4
1 WH
C1950
1 WH
C1208
Ghia, Courier
56A-3
.75 BU/WH
12
C900
E80
Additional head-lamp main beam RH
A70
Instrument cluster
[8] Main beam indi-cator
8
32-13
1.5 BU/GN
C1208
5
C900
Earth Distribution
31-10A
1 BN
C1950
Earth Distribution
31-10C
1 BN
Ghia, Courier
32-13A
G1007
G1007
S1071
1.5 BU/GN

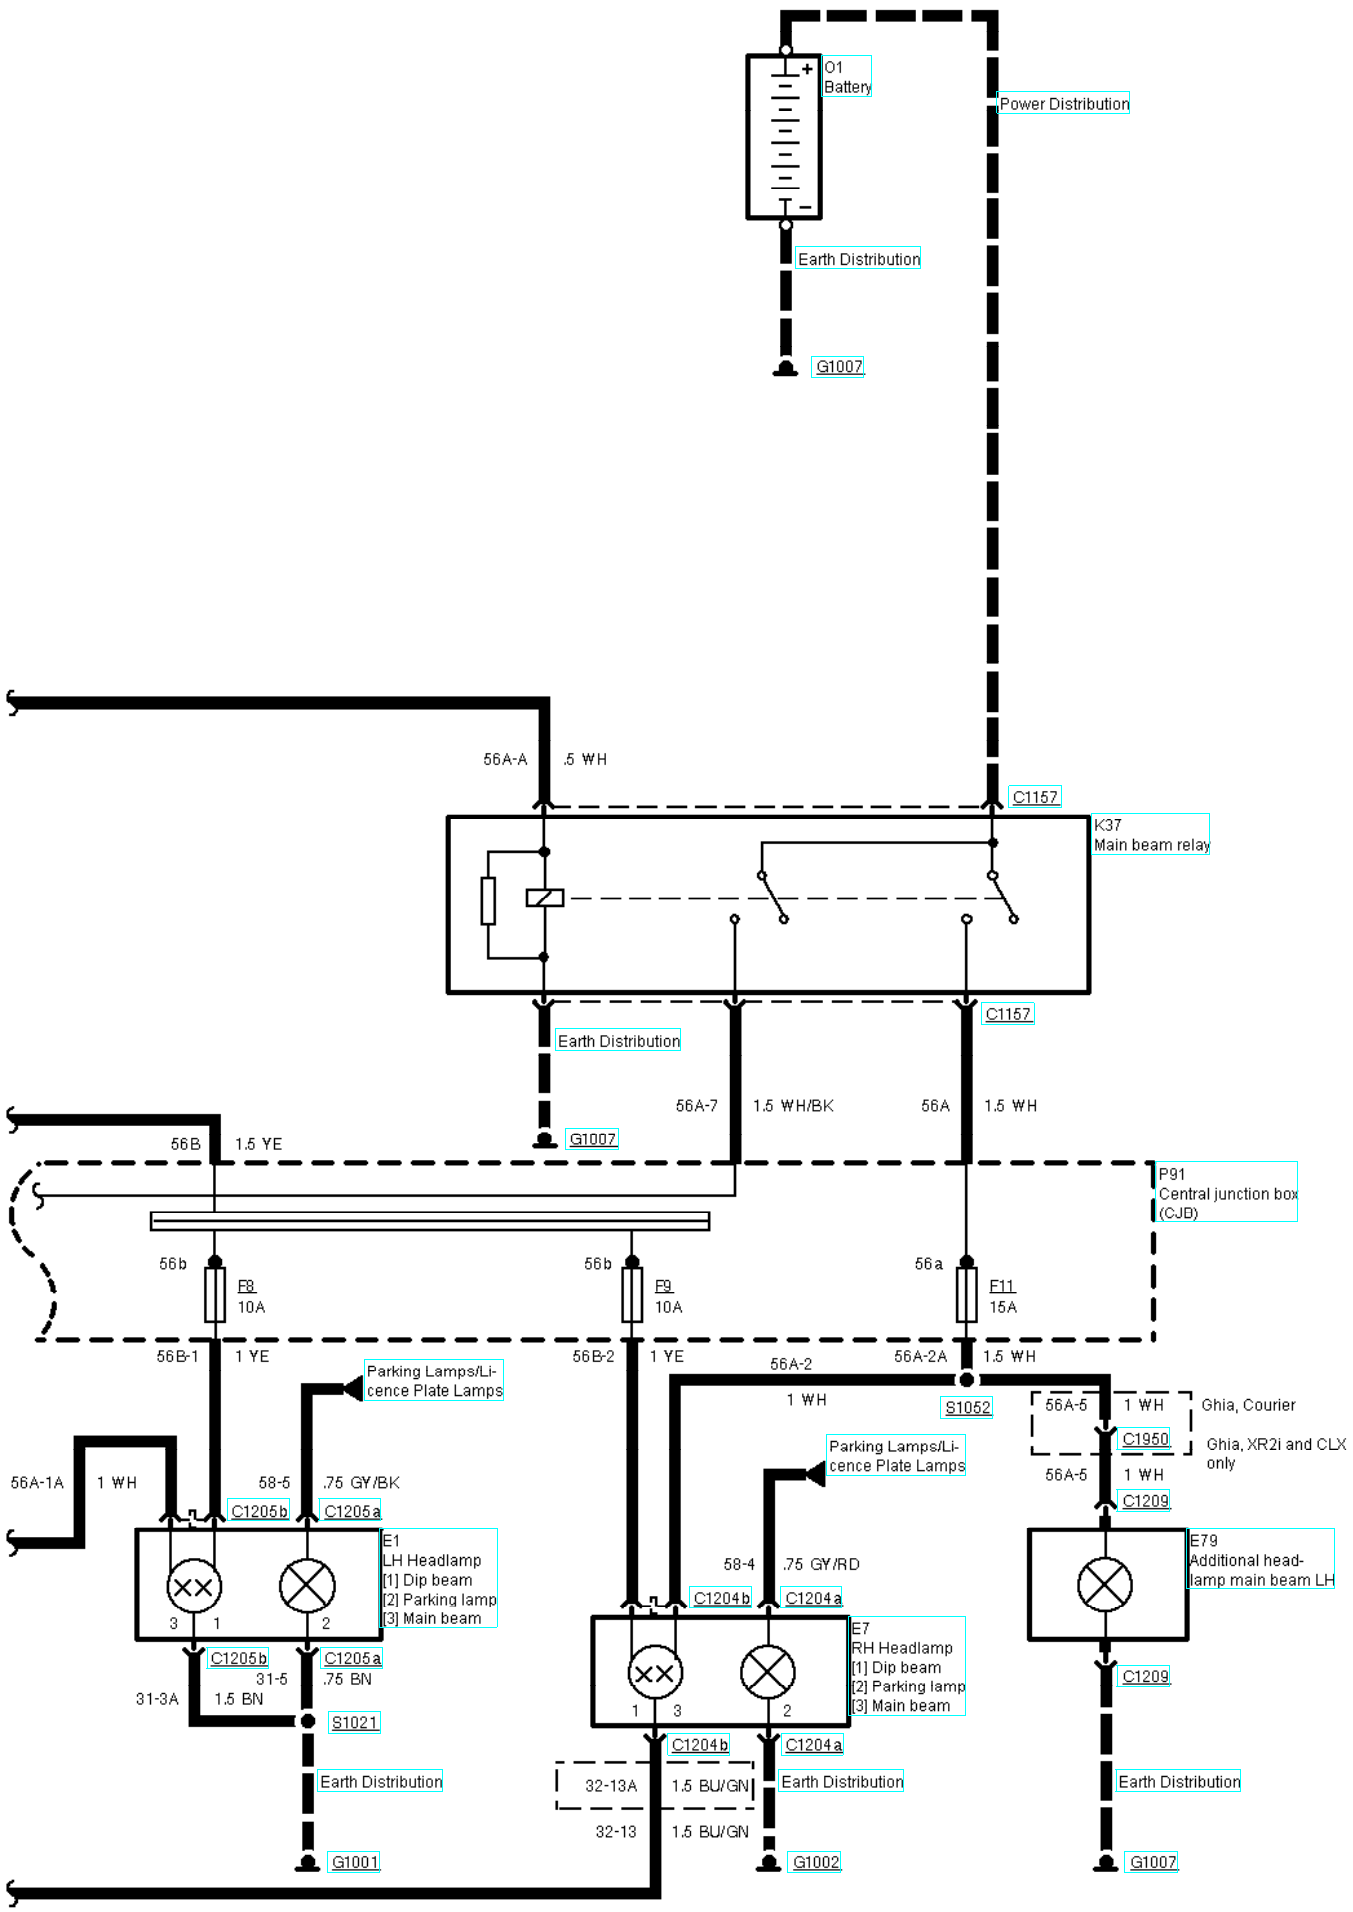
O1
Battery
Power Distribution
Earth Distribution
G1007
56A-A
.5 WH
C1157
K37
Main beam relay
C1157
Earth Distribution
56A-7
1.5 WH/BK
56A
1.5 WH
56B
1.5 YE
G1007
P91
Central junction box
(CJD)
56b
F8
10A
56b
F9
10A
56a
F11
15A
56B-1
1 YE
56B-2
1 YE
56A-2
1 WH
56A-2A
1.5 WH
S1052
Parking Lamps/Li-
cence Plate Lamps
56A-5
1 WH
Ghia, Courier
C1950
Ghia, XR2i and CLX
only
56A-1A
1 WH
58-5
.75 GY/BK
C1205b
C1205a
Parking Lamps/Li-
cence Plate Lamps
56A-5
1 WH
C1209
E1
LH Headlamp
[1] Dip beam
[2] Parking lamp
[3] Main beam
58-4
.75 GY/RD
C1204b
C1204a
E79
Additional head-
lamp main beam LH
C1205b
C1205a
31-5
.75 BN
31-3A
1.5 BN
S1021
E7
RH Headlamp
[1] Dip beam
[2] Parking lamp
[3] Main beam
C1204b
C1204a
C1209
Earth Distribution
32-13A
1.5 BU/GN
Earth Distribution
Earth Distribution
32-13
1.5 BU/GN
G1001
G1002
G1007

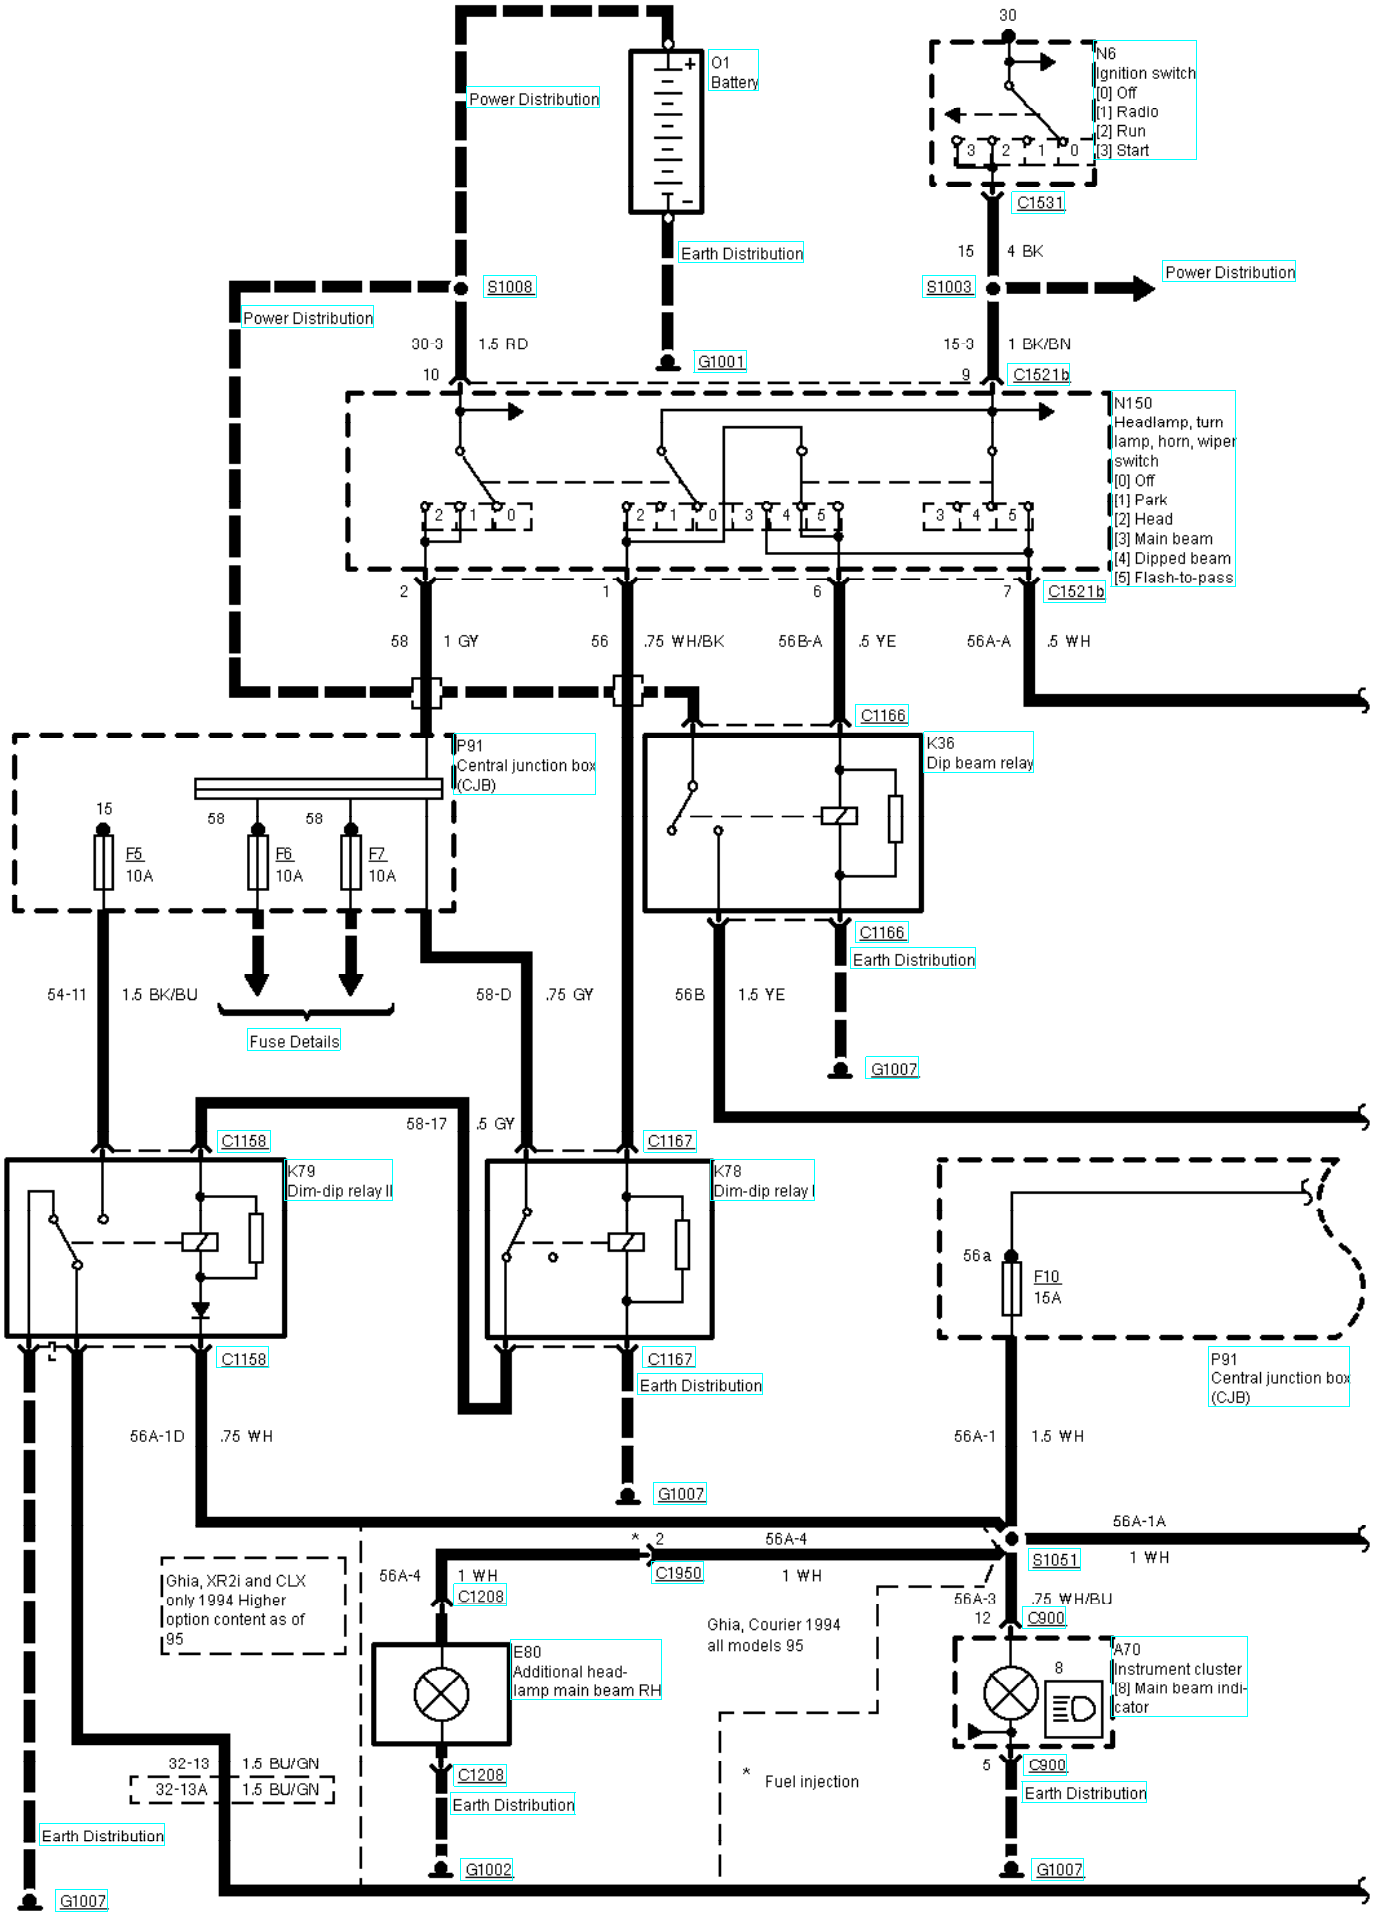
Power Distribution
O1
Battery
Earth Distribution
30
N6
Ignition switch
[0] Off
[1] Radio
[2] Run
[3] Start
C1531
15
4 BK
Power Distribution
S1008
S1003
Power Distribution
30-3
1.5 RD
G1001
15-3
1 BK/BN
10
9
C1521b
N150
Headlamp, turn lamp, horn, wiper switch
[0] Off
[1] Park
[2] Head
[3] Main beam
[4] Dipped beam
[5] Flash-to-pass
C1521b
58
1 GY
56
.75 WH/BK
56B-A
.5 YE
56A-A
.5 WH
C1166
P91
Central junction box (CJB)
K36
Dip beam relay
15
58
58
F5
10A
F6
10A
F7
10A
C1166
Earth Distribution
54-11
1.5 BK/BU
58-D
.75 GY
56B
1.5 YE
Fuse Details
G1007
58-17
.5 GY
C1158
K79
Dim-dip relay II
C1167
K78
Dim-dip relay I
56a
F10
15A
C1158
C1167
Earth Distribution
P91
Central junction box (CJB)
56A-1D
.75 WH
56A-1
1.5 WH
G1007
56A-1A
*
2
56A-4
S1051
1 WH
Ghia, XR2i and CLX only 1994 Higher option content as of 95
56A-4
1 WH
C1208
C1950
1 WH
56A-3
.75 WH/BU
12
C900
Ghia, Courier 1994 all models 95
E80
Additional head-lamp main beam RH
8
A70
Instrument cluster
[8] Main beam indi-cator
32-13
1.5 BU/GN
32-13A
1.5 BU/GN
C1208
Earth Distribution
*
Fuel injection
5
C900
Earth Distribution
Earth Distribution
G1002
G1007
G1007

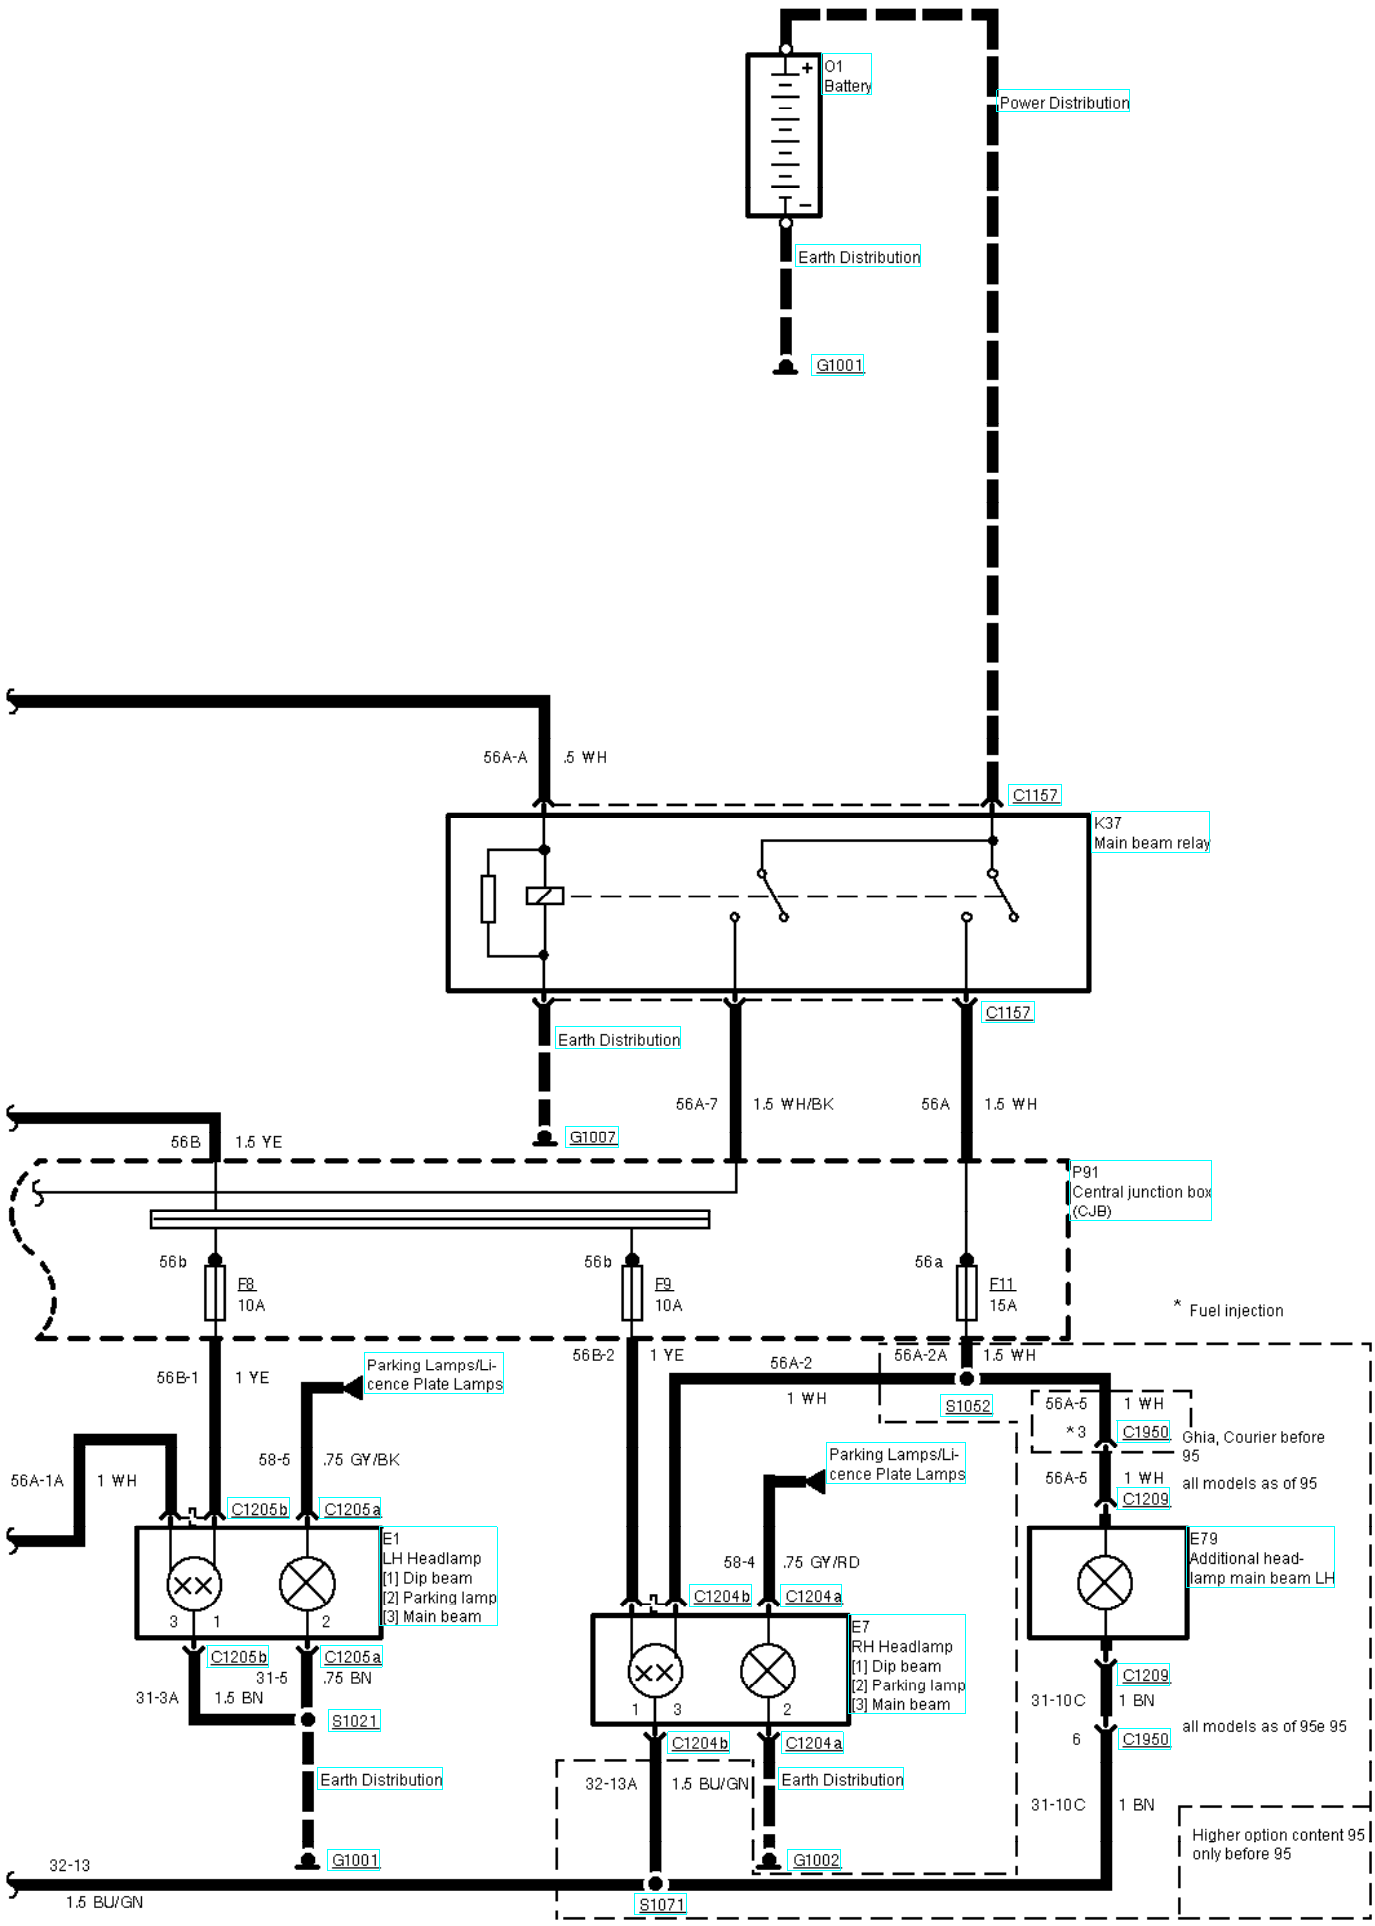
O1
Battery
Power Distribution
Earth Distribution
G1001
56A-A
.5 WH
C1157
K37
Main beam relay
Earth Distribution
C1157
56A-7
1.5 WH/BK
56A
1.5 WH
G1007
56B
1.5 YE
P91
Central junction box
(CJB)
56b
F8
10A
56b
F9
10A
56a
F11
15A
* Fuel injection
56B-1
1 YE
Parking Lamps/Licence Plate Lamps
56B-2
1 YE
56A-2
1 WH
56A-2A
1.5 WH
S1052
56A-5
1 WH
*3
C1950
Ghia, Courier before 95
56A-1A
1 WH
58-5
.75 GY/BK
C1205b
C1205a
E1
LH Headlamp
[1] Dip beam
[2] Parking lamp
[3] Main beam
Parking Lamps/Licence Plate Lamps
58-4
.75 GY/RD
C1204b
C1204a
E7
RH Headlamp
[1] Dip beam
[2] Parking lamp
[3] Main beam
56A-5
1 WH
C1209
all models as of 95
E79
Additional head-lamp main beam LH
C1205b
31-5
.75 BN
C1205a
31-3A
1.5 BN
S1021
Earth Distribution
C1204b
C1204a
32-13A
1.5 BU/GN
Earth Distribution
G1002
C1209
31-10C
1 BN
6
C1950
all models as of 95e 95
31-10C
1 BN
Higher option content 95 only before 95
32-13
1.5 BU/GN
G1001
S1071