


Model 212
 (Countries with high dust levels)

- Service A**
- Service B**
- Plus package
- For every service (equipment specific)
- Once at 3,000 km (1,850 mi)
- Service 3 every service
- Service 4 every 2 years
- Service 8 every 50,000 km (31,000 mi)/3 years
- Service 8 every 75,000 km (46,500 mi)/4 years
- Service 10 every 50,000 km (31,000 mi)/3 years
- Service 11 every 75,000 km (46,500 mi)/4 years
- Service 11 every 250,000 km (155,000 mi)/15 years
- Service 12 every 50,000 km (31,000 mi)/3 years
- Service 12 every 75,000 km (46,500 mi)/4 years
- Service 13 every 250,000 km (155,000 mi)/15 years
- Service 15 At every Service B
- Service 20 once at 50,000 km (31,000 mi)/3 years
- Service 20 every 100,000 km (62,000 mi)/5 years
- Service 20 every 125,000 km (77,500 mi)/5 years

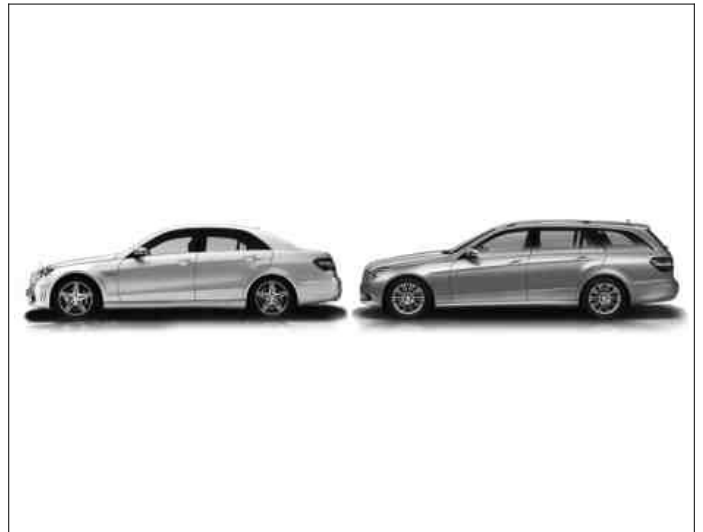

P00.00-4883-11

Customer.....

Order number.....

VIN/license plate number.....

Current mileage.....

Service code.....

Workshop code.....

Remaining distance.....

Remaining time.....

Oil type/viscosity.....

Completion time/date.....

Service consultation performed at vehicle

Yes No

Notes/explanations.....

The following activities are hereby confirmed:
 - Completion of relevant service operations

Signature.....

A	B	Input condition not OK:	<input checked="" type="checkbox"/>
Completed			
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		
↓	↓		↓
Service reception			

<input type="checkbox"/>	<input type="checkbox"/>	The completely edited reception report for service on vehicle is available	<input type="radio"/>	AP00.20-P-0009Z
<p>i To be performed by the Service Advisor (where market-specific conditions require). Fully process all acceptance items and the maintenance items listed in the service sheet, only then is the service scope completely performed.</p>				
<input type="checkbox"/>	<input type="checkbox"/>	Brake system Perform brake test and enter the result in the table	<input type="radio"/>	AP42.00-P-4290BA
	<input type="checkbox"/>	Vehicle exterior Check exterior lights for proper operation	<input type="radio"/>	AP82.10-P-8252EW
	<input type="checkbox"/>	Check operation of headlamp range adjustment Vehicles with xenon or dynamic LED headlamps or headlamp range controller on the exterior lights switch	<input type="radio"/>	AP82.10-P-8250EW
	<input type="checkbox"/>	Check/correct headlamp adjustment	<input type="radio"/>	AP82.10-P-8260EW
<p>i The adjustment of headlamps on vehicles with level control system or XENON dynamic LED headlamps is to be invoiced as an additional operation.</p>				
	<input type="checkbox"/>	Vehicle interior Check windshield wipers, windshield washer system and headlamp cleaning system for proper operation	<input type="radio"/>	AP82.30-P-8252EW
<input type="checkbox"/>	<input type="checkbox"/>	Check starter Model 212.095/098/195/298	<input type="radio"/>	AP15.30-P-1550AA
<input type="checkbox"/>	<input type="checkbox"/>	Replace activated charcoal particle filter	<input type="radio"/>	AP83.00-P-8384EW
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Clean water drain	<input type="radio"/>	AP82.35-P-8232A
<input type="checkbox"/>	<input type="checkbox"/>	Brake system: Check fluid level	<input type="radio"/>	AP42.10-P-4210EW
	<input type="checkbox"/>	Power steering: Check fluid level Except code 211 (Direct-Steer system)	<input type="radio"/>	AP46.00-P-4612EW
	<input type="checkbox"/>	Check low-temperature circuit coolant level Engines with separate coolant expansion reservoir for low-temperature circuit	<input type="radio"/>	AP00.20-P-0055EW
	<input type="checkbox"/>	Check all visible parts in engine compartment for damage and leaks	<input type="radio"/>	AP00.20-P-0055EW
	<input type="checkbox"/>	Check poly-V-belt in visible area for signs of wear	<input type="radio"/>	AP13.22-P-1352CW
	<input type="checkbox"/>	Underside of vehicle Check all visible parts of vehicle underside for damage and leaks	<input type="radio"/>	AP00.20-P-0054EW
	<input type="checkbox"/>	i The country-specific regulations for mobility and body shell complaints apply.	<input type="radio"/>	AP46.00-P-4653EW
	<input type="checkbox"/>	Check track rod and drag link linkage for play, check boots	<input type="radio"/>	AP46.00-P-4653EW

<input type="checkbox"/>	<input type="checkbox"/>	Check front axle ball joint for play, check boots -----	<input type="radio"/>	AP33.20-P-3353EW
<input type="checkbox"/>	<input type="checkbox"/>	Check condition of propeller shaft and flex disks -----	<input type="radio"/>	AP41.10-P-4152EW
<input type="checkbox"/>	<input type="checkbox"/>	Check tires for damage and crack formation and enter result in table -----	<input type="radio"/>	AP40.10-P-4051EW
Tires				
Plus package				
<input type="checkbox"/>	<input type="checkbox"/>	Correct tire pressure and enter set tire pressure in table -----	<input type="radio"/>	AP40.15-P-4061A
Trunk				
Plus package				
<input type="checkbox"/>	<input type="checkbox"/>	Check/correct spare wheel tire pressure and enter set tire pressure in table ----- Vehicles with spare tire	<input type="radio"/>	AP40.15-P-4061A
<input type="checkbox"/>	<input type="checkbox"/>	Check TIREFIT tire sealant ----- Vehicles fitted with TIREFIT	<input type="radio"/>	AP40.10-P-4054R
		i Enter TIREFIT expiration date here: _____		
		i Replace TIREFIT, invoice as additional operation.		
<input type="checkbox"/>	<input type="checkbox"/>	Check first aid bag -----	<input type="radio"/>	AP68.00-P-6850EW
		i Enter first aid bag expiration date here: _____		
		i Replace first aid bag, invoice as an additional operation.		
<input type="checkbox"/>	<input type="checkbox"/>	Check trunk illumination for proper operation -----	<input type="radio"/>	
Engine compartment				
Plus package				
<input type="checkbox"/>	<input type="checkbox"/>	Windshield washer system: Check/correct fluid level -----		AP82.35-P-8210EW
		i When using cleaning compounds for summer/winter, and depending on the ambient temperature, observe the mixing ratio.		
Vehicle interior				
Plus package				
<input type="checkbox"/>	<input type="checkbox"/>	Check lamps in the instrument cluster and interior illumination for proper operation -----	<input type="radio"/>	AP54.30-P-5453EW
Vehicle interior				
For every service (equipment specific)				
<input type="checkbox"/>	<input type="checkbox"/>	Check ex-factory driving aids ----- Vehicles with ex-factory driving aids	<input type="radio"/>	AP86.20-P-8649U
<input type="checkbox"/>	<input type="checkbox"/>	Replace battery for KEYLESS-GO key ----- After consultation with customer With code 889 (KEYLESS-GO)	<input type="radio"/>	
Trunk				
For every service (equipment specific)				
<input type="checkbox"/>	<input type="checkbox"/>	AdBlue® tank: Fill up fluid level ----- After consultation with customer		

			With code U42 (BlueTEC (SCR) diesel exhaust treatment) or with code U77 (BlueTEC (SCR) diesel exhaust treatment)	AP14.40-P-1410BT
<input type="checkbox"/>	<input type="checkbox"/>	Underside of vehicle Once at 3,000 km (1,850 mi) Rear axle: Perform oil change	----- With code 471 (Manual locking differential)	AP35.00-P-3501CMG
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Service 3 every service Engine: Change oil and oil filter	----- Engine 156 Engine 157 ENGINE 271 Engine 272.923/952/980/983 Engine 272.977 Engine 273 Engine 274.910 Engine 274.920 Engine 276 Engine 278 Engine 642 Engine 651	AP18.00-P-0101TMG AP18.00-P-0101EWG AP18.00-P-0101AB AP18.00-P-0101PIT AP18.00-P-0101VA AP18.00-P-0101SX AP18.00-P-0101CWF AP18.00-P-0101CWH AP18.00-P-0101CWZ AP18.00-P-0101EW AP18.00-P-0101EWO AP18.00-P-0101CWA
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Service 4 every 2 years Brake system: Replace brake fluid	-----	AP42.00-P-4280EW
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Service 8 every 50,000 km (31,000 mi)/3 years Replace air filter element	----- Engine 156 Engine 157	AP09.10-P-0980CMG AP09.10-P-0980AB
<input type="checkbox"/>	<input type="checkbox"/>	Underside of vehicle Service 8 every 50,000 km (31,000 mi)/3 years Rear axle: Perform oil change	----- With code 471 (Manual locking differential)	AP35.00-P-3501CMG
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Service 8 every 75,000 km (46,500 mi)/4 years Replace air filter element	----- Engine 271.8 Engine 271.9 Engine 272, 273 Engine 274 with code 924 (Bivalent natural gas drive) Engine 274 except code 924 (Bivalent natural gas drive) Engine 276.8 Engine 276.9 Engine 278 Engine 642 Engine 651	AP09.10-P-0980CWT AP09.10-P-0980CW AP09.10-P-0980EW AP09.10-P-0980CWG AP09.10-P-0980CWF AP09.10-P-0980E AP09.10-P-0980MM AP09.10-P-0980AB AP09.10-P-0980GZB AP09.10-P-0980EWD
<input type="checkbox"/>	<input type="checkbox"/>	Vehicle interior Service 10 every 50,000 km (31,000 mi)/3 years Panoramic sliding sunroof: Clean and lubricate guide mechanism	----- With code 413 (Panoramic sliding sunroof)	AP77.20-P-7732EW
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Service 11 every 75,000 km (46,500 mi)/4 years Replace fuel filter	----- Engine 642 Engine 651	AP47.20-P-0780EWO AP47.20-P-0780EWD
		Vehicle interior Service 11 every 250,000 km (155,000 mi)/15 years		

<input type="checkbox"/>	<input type="checkbox"/>	Replace fuel filter	----- Engine 156, 157, 271, 272, 273, 274, 276, 278	AP47.20-P-0780EW
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Service 12 every 50,000 km (31,000 mi)/3 years Replace spark plugs	----- Engine 271.9 with code 924 (Bivalent natural gas drive) Engine 274 with code 924 (Bivalent natural gas drive)	AP15.10-P-1580CW AP15.10-P-1580CWF
<input type="checkbox"/>	<input type="checkbox"/>	Engine compartment Service 12 every 75,000 km (46,500 mi)/4 years Replace spark plugs	----- Engine 156 Engine 157, 272, 273, 276, 278 Engine 271.8 Engine 274 except code 924 (Bivalent natural gas drive)	AP15.10-P-1580CMG AP15.10-P-1580EW AP15.10-P-1580CW AP15.10-P-1580CWF
<input type="checkbox"/>	<input type="checkbox"/>	Underside of vehicle Service 13 every 250,000 km (155,000 mi)/15 years Replace coolant in main circuit	-----	AP20.00-P-2080EW
<input type="checkbox"/>	<input type="checkbox"/>	Replace coolant for low-temperature circuit	----- Engines with separate coolant expansion reservoir for low- temperature circuit	
	<input type="checkbox"/>	Vehicle exterior Service 15 At every Service B Trailer hitch: Check condition and operation	----- ○ With code (550) Trailer hitch	AP31.11-P-3152EW
<input type="checkbox"/>	<input type="checkbox"/>	Underside of vehicle Service 20 once at 50,000 km (31,000 mi)/3 years Automatic transmission: Change oil and oil filter	----- Transmission 722.618/696 Transmission 722.9 except code A64 (FE converter 0 mm) except code A65 (FE converter 13.5 mm) except code A66 (FE converter 19 mm)	AP27.00-P-2702EW AP27.00-P-2702W
<input type="checkbox"/>	<input type="checkbox"/>	Underside of vehicle Service 20 every 100,000 km (62,000 mi)/5 years Automatic transmission: Change oil and oil filter	----- Transmission 724.2	AP27.00-P-2702A
<input type="checkbox"/>	<input type="checkbox"/>	Underside of vehicle Service 20 every 125,000 km (77,500 mi)/5 years Automatic transmission: Change oil and oil filter	----- Transmission 722.9 with code A64 (FE converter 0 mm) with code A65 (FE converter 13.5 mm) with code A66 (FE converter 19 mm) Transmission 725.0	AP27.00-P-2702W AP27.00-P-2702BC

Brake values

	Left	Right
Front		
Rear		
Parking brake		

Tire condition

	Right front	Left front	Right rear	Left rear

Condition OK.				
Condition not OK.				

Set tire pressure in bar or psi

	Front axle	Rear axle	Spare wheel
bar/psi			